






Required Tools for Installation




10mm

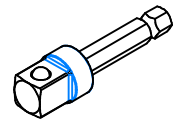







13mm

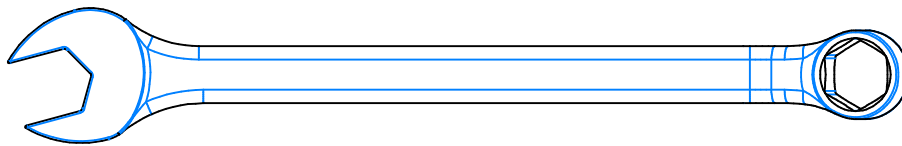

17mm



Ø8mm (Ø5/16")

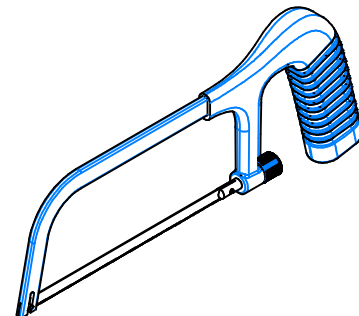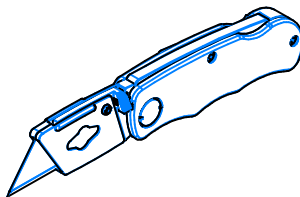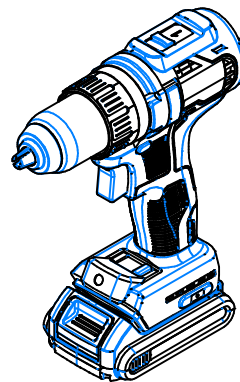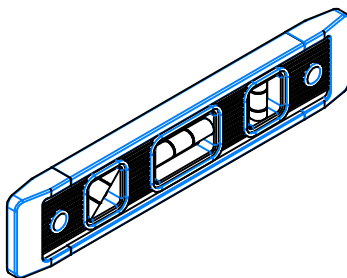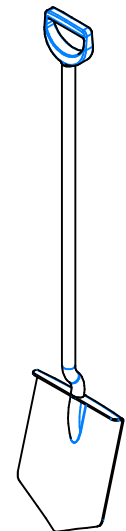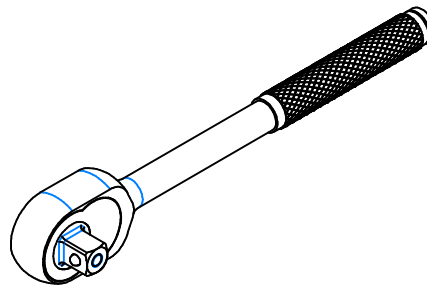

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate


Scale:

--

5/8/2025

1/18

Customer Supplied Hardware (Wood)

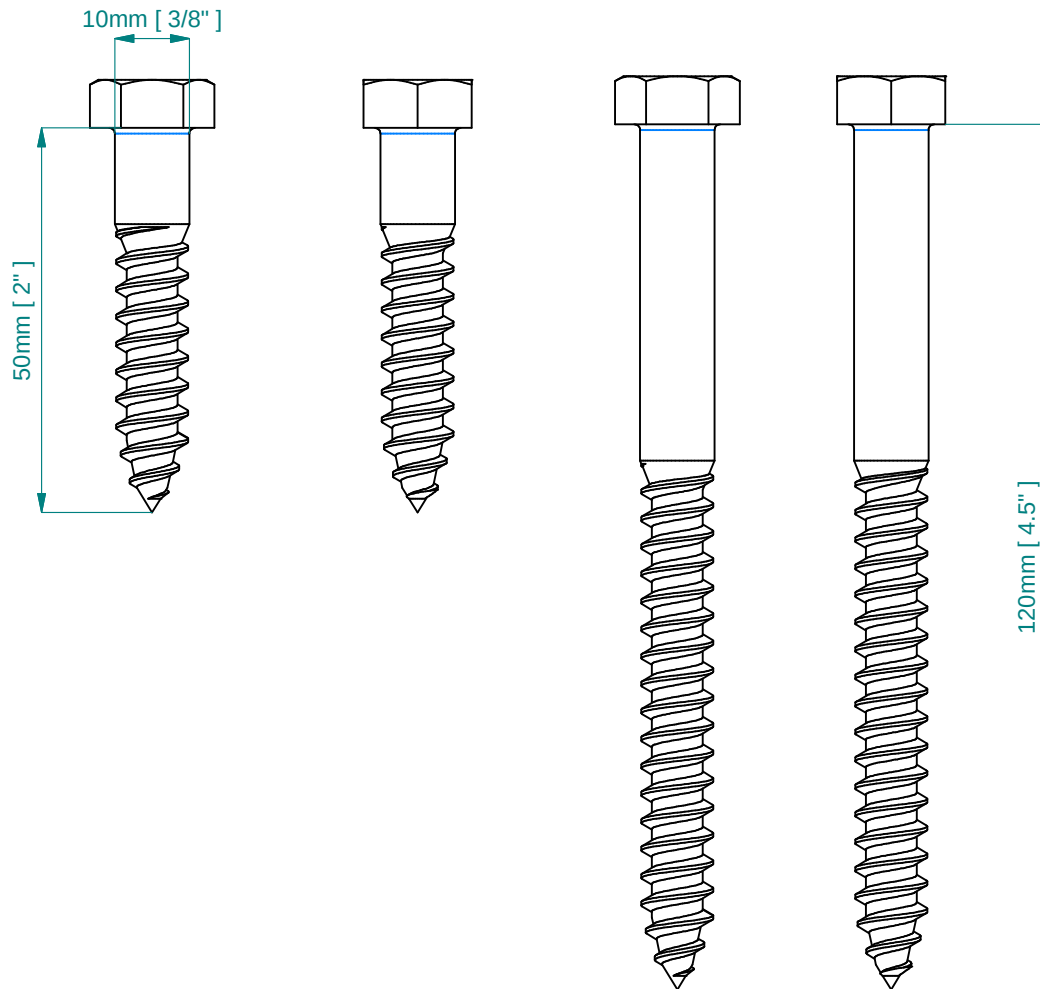**MUNCKHOF**

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate



Scale:

1 : 1


5/8/2025

2/18


Supplied Components

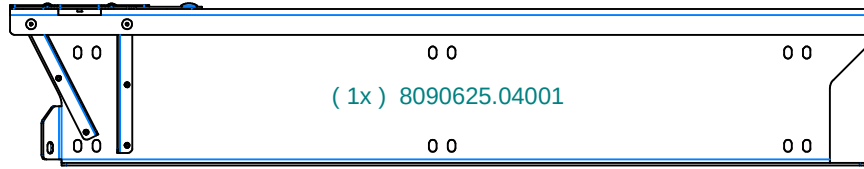








(1x)
8090625.50001
See page 2



(1x) 4090625.09001-Gang



(1x) 4090625.09001M-Gang

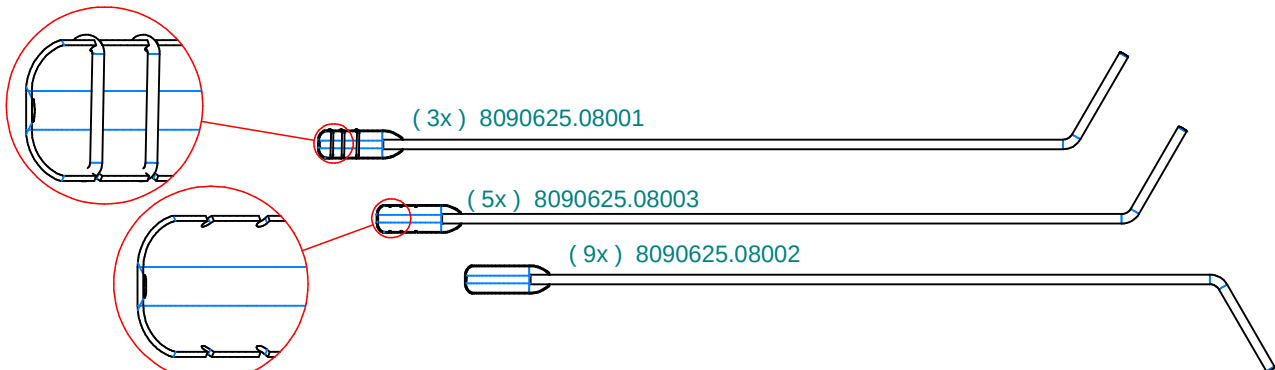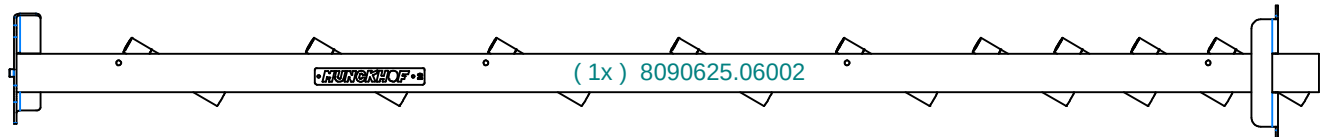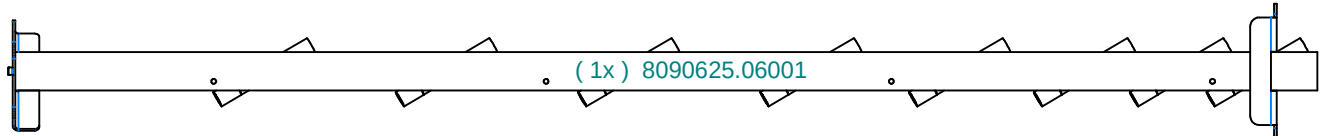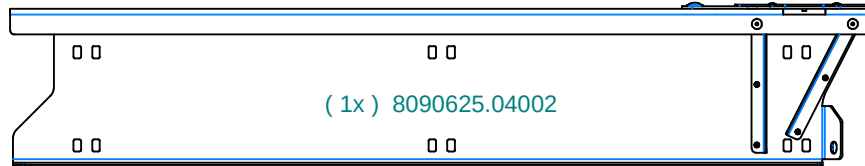

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate

Scale:

1 : 10


4/5/2024

8090625.03001

³/₁₈

Fastener Box Component List

(6x) 9010001.06012 - M6 x 12 Hex Bolt




(48x) 9014101.06000 - M6 Nylock




(8x) 9014101.08000 - M8 Nylock




(42x) 9010001.06065 - M6 x 65 Hex Bolt




(4x) 9014101.10000 - M10 Nylock

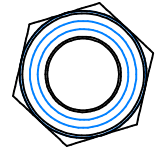


(6x) 9010001.08020 - M8 x 20 Hex Bolt

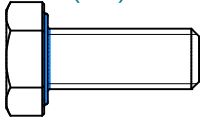


(48x) 9016001.06012 - M6 Flat Washer

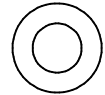


(14x) 9016001.08017 - M8 Flat Washer

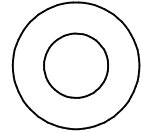


(2x) 9011501.08016 - M6 x 16 Carriage Bolt

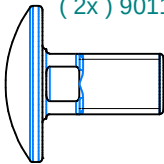


(14x) 9016001.10020 - M10 Flat Washer

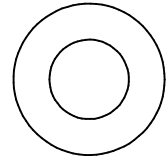


(10x) 9010001.10030 - M10 x 30 Hex Bolt

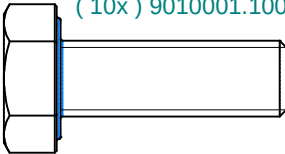


(6x) 9016011.10000 - M10 Lock Washer

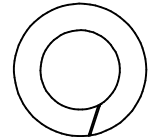

(17x) 4090625.09002 - UV Resistant Bumper

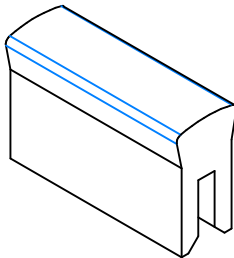

(2x) 4090625.01003 - Lag Washer

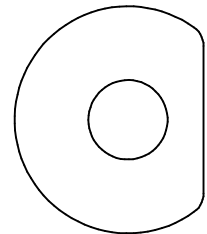

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate

Scale:




1 : 1

7/7/2006

9011501.08016

4/18

Unboxing

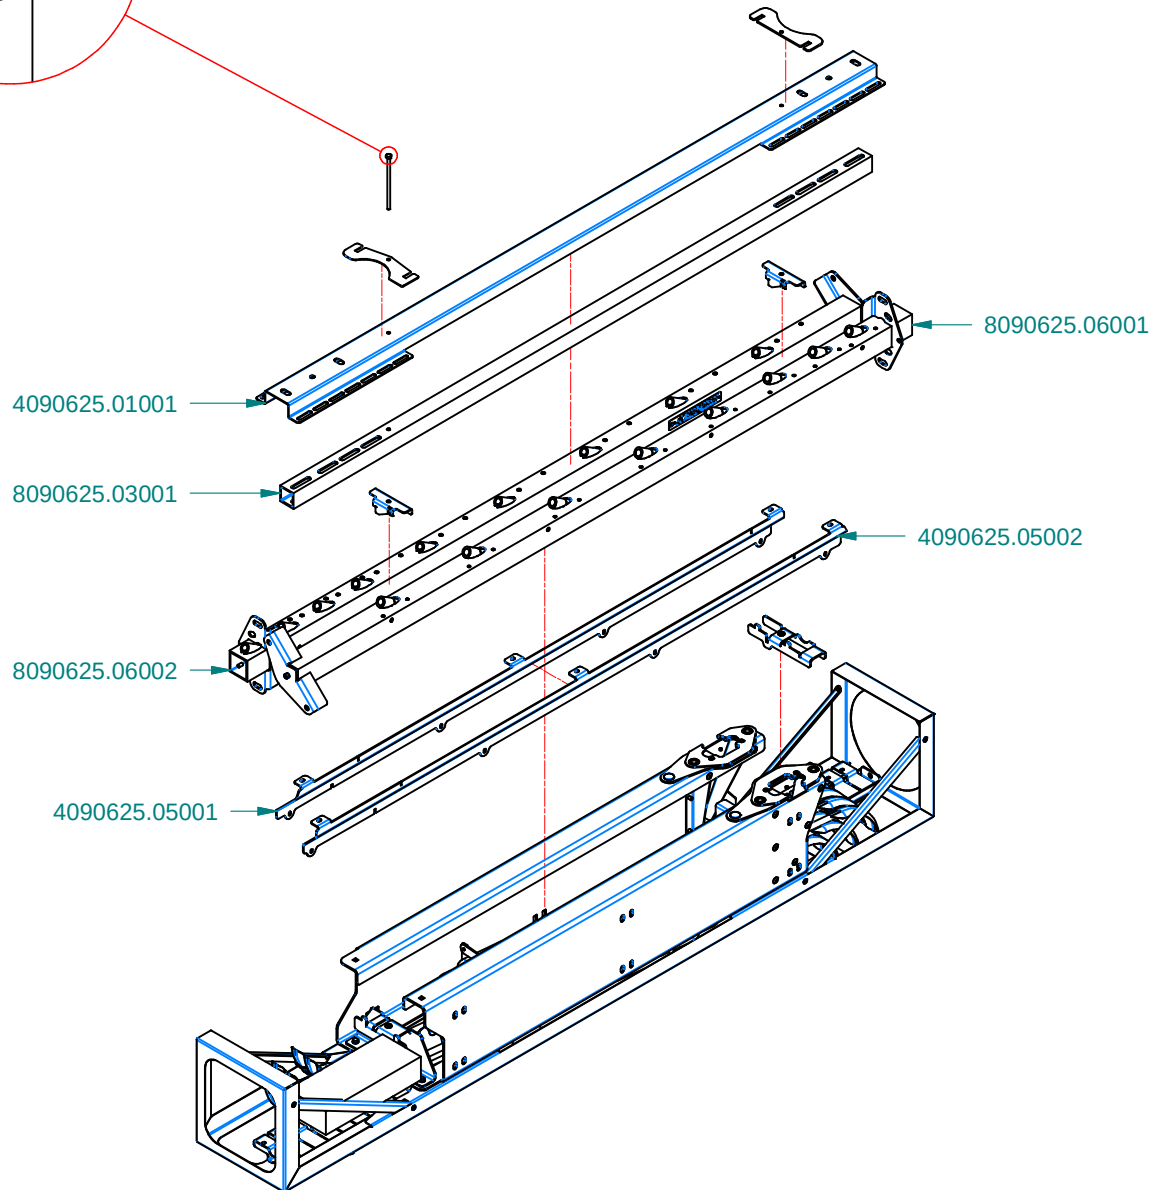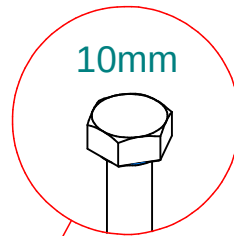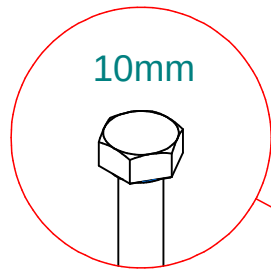

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate

Scale:




1 : 15

11/20/2024

8090625.40001

5/18

Unboxing

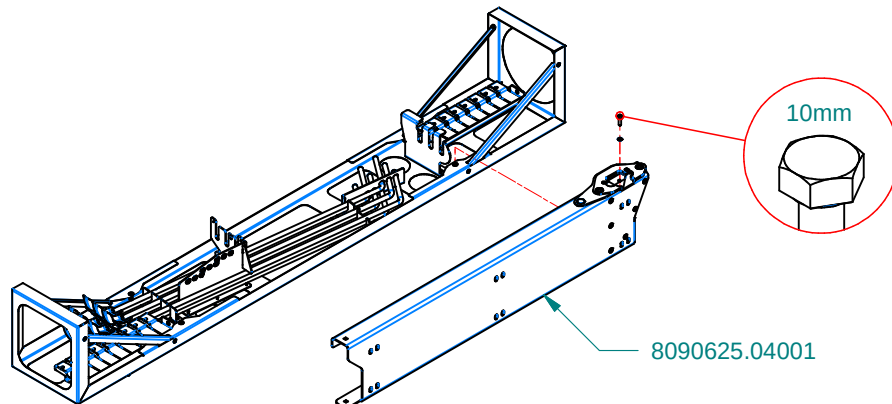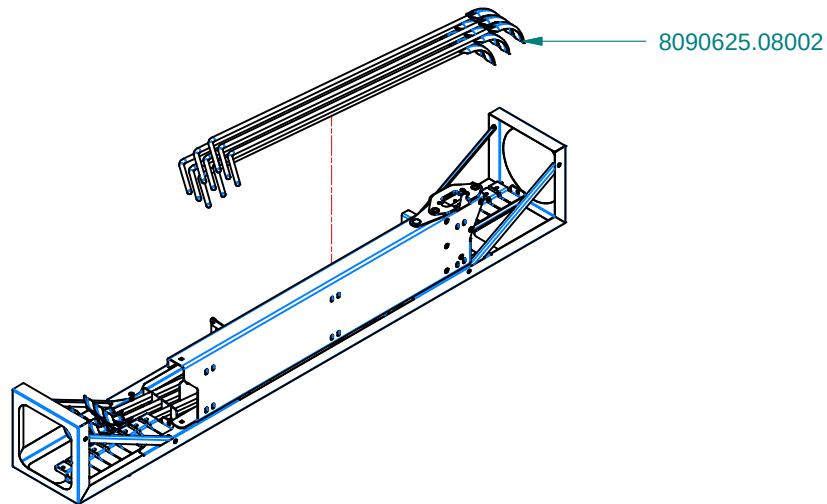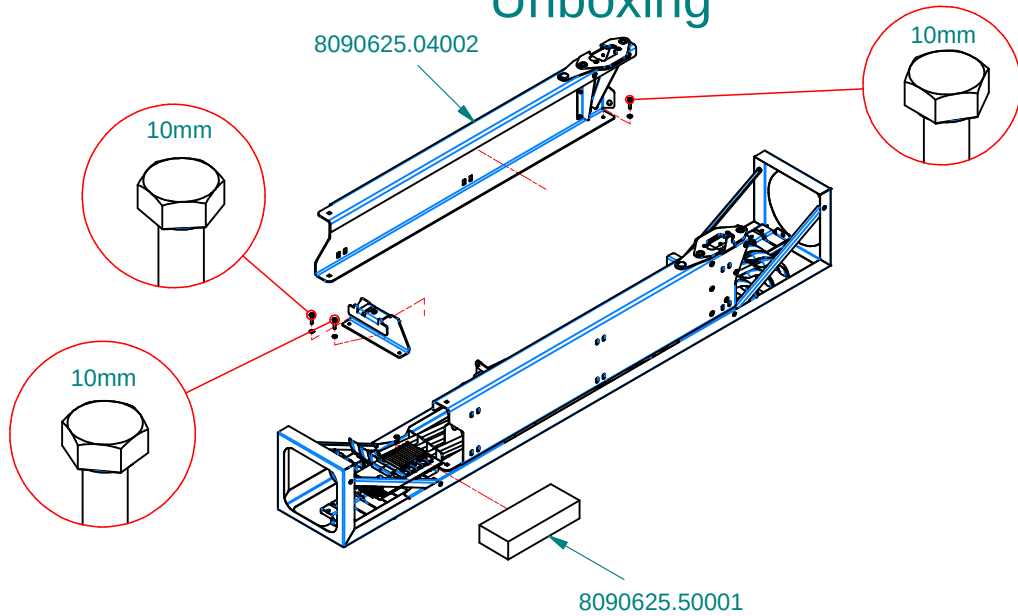

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate


Scale:

11/20/2024

8090625.40002

6/18

Unboxing

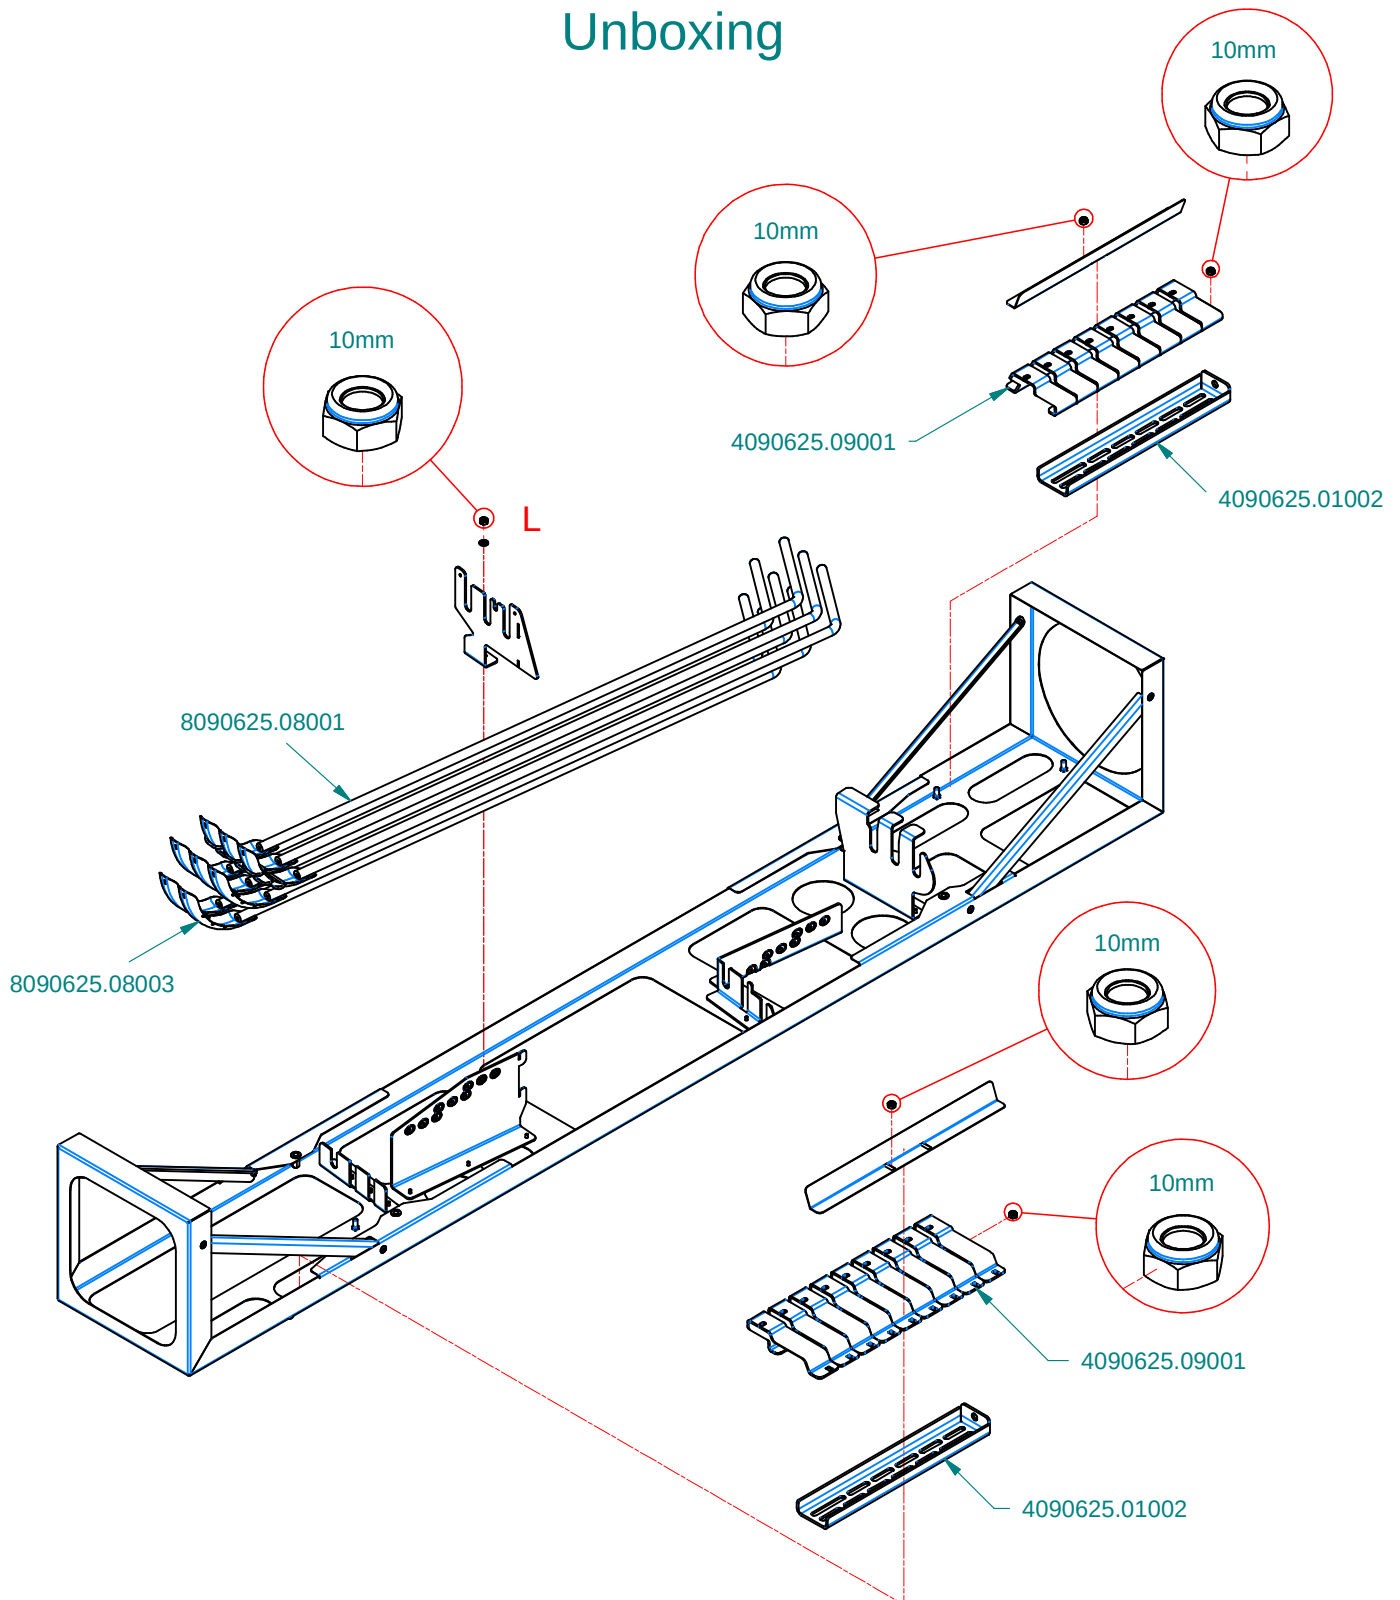

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate


Scale:

11/20/2024

8090625.40004

7/18

Installation

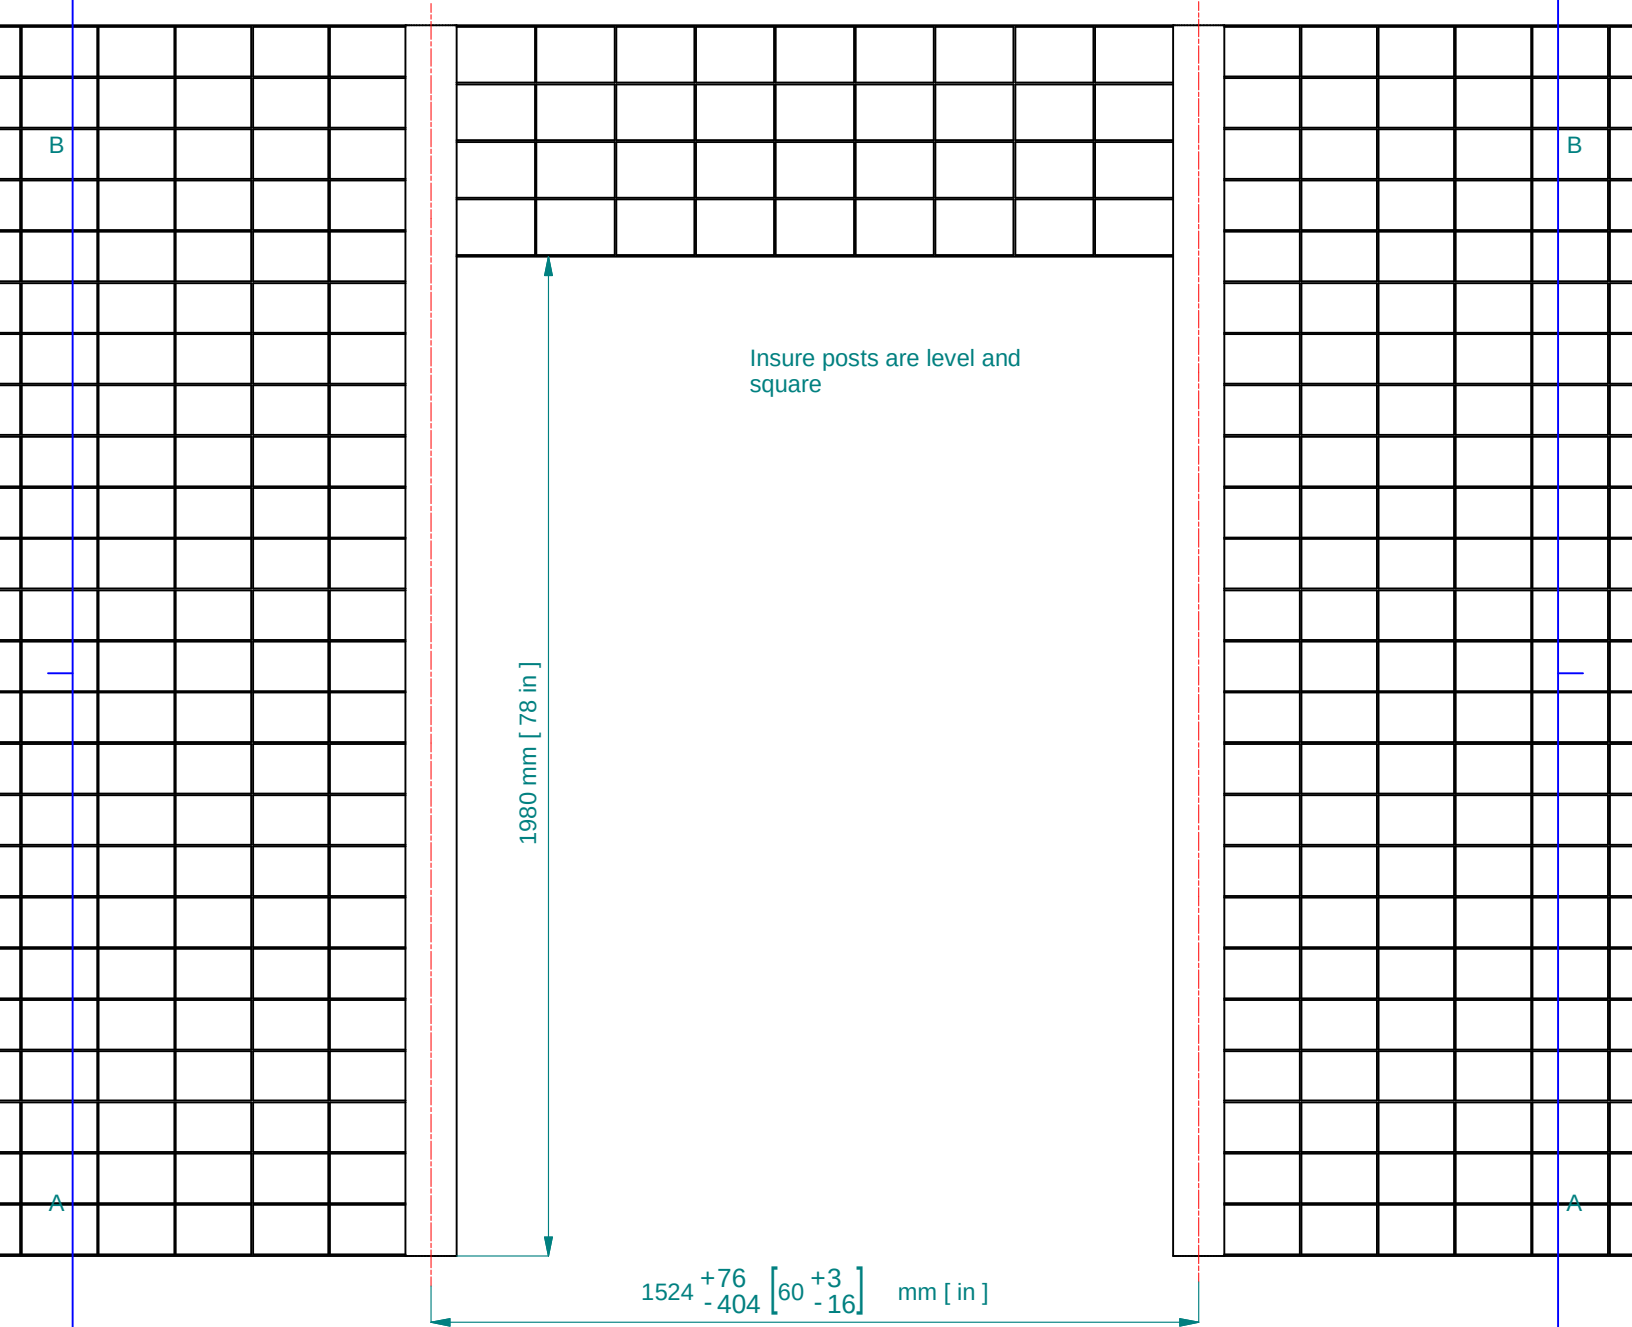

MUNCKHOF


Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate


Scale:

5/9/2025

Installation

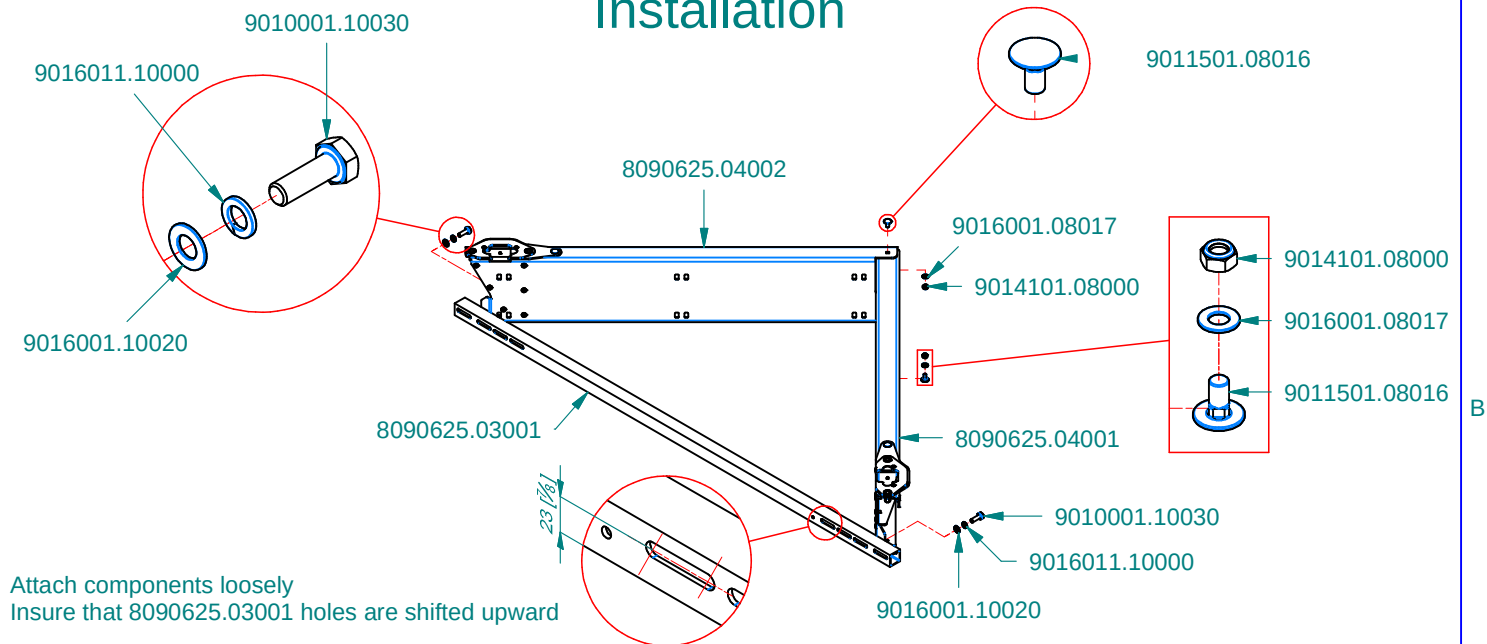

After leveling you may need to remove bolts to lag 8090625.03001 to the post. Once it is attached to the post and leveled, tighten all bolts

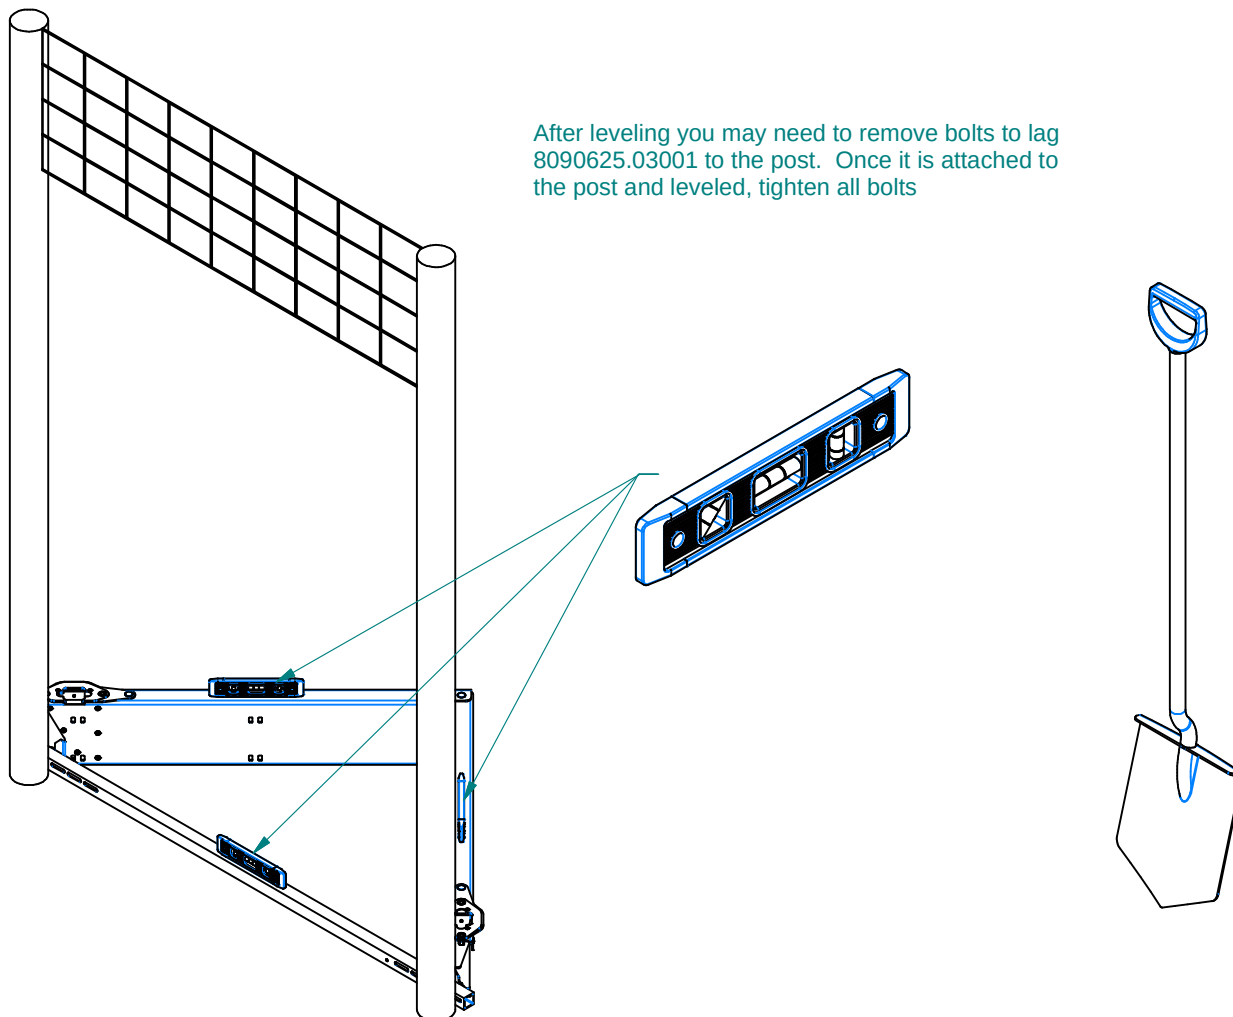

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate

Scale:


11/12/2024

8090625.02001


9/18

Installation

4090625.01003 Washer has a flat, when the lag is close to where the bottom channels attach turn the flat to face the channel. If lags do not align completely with the post angle lags to compensate or shift gate left or right of center to compensate.

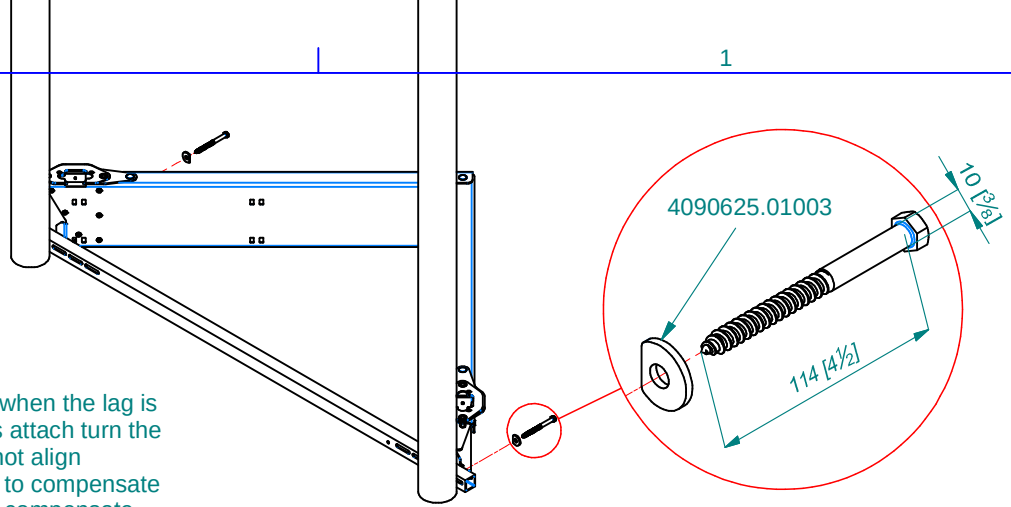

Attach Bolts Loosely

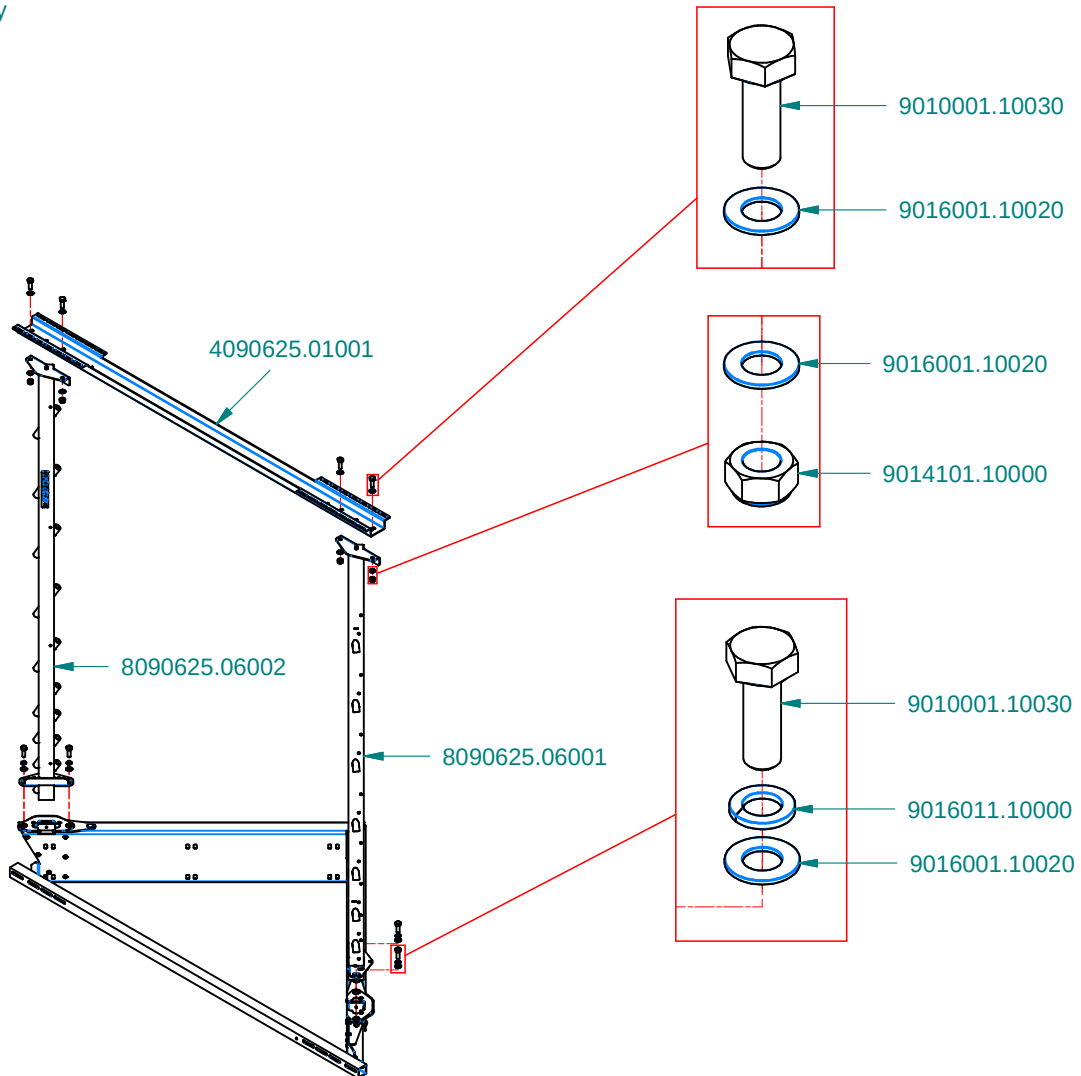

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460


Munckhof Gravity Wildlife Gate

Scale:

5/9/2025

10
18

Installation

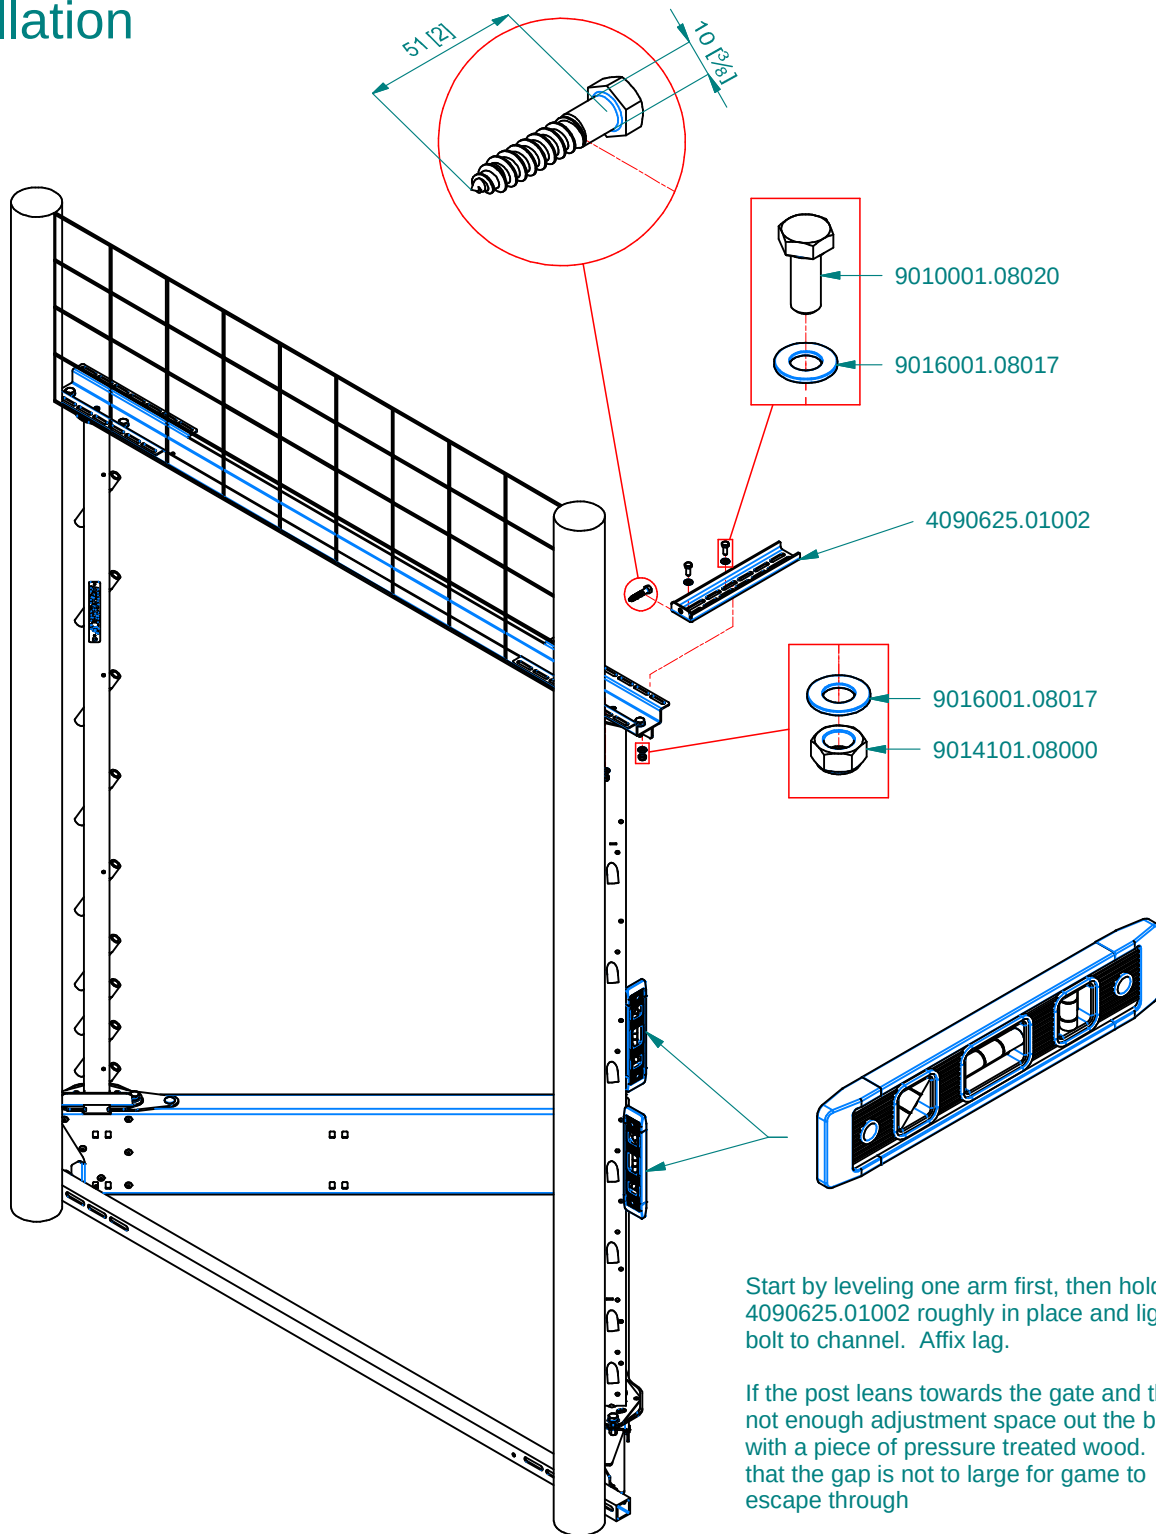

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460


Munckhof Gravity Wildlife Gate

Scale:

5/9/2025

11
18

Installation

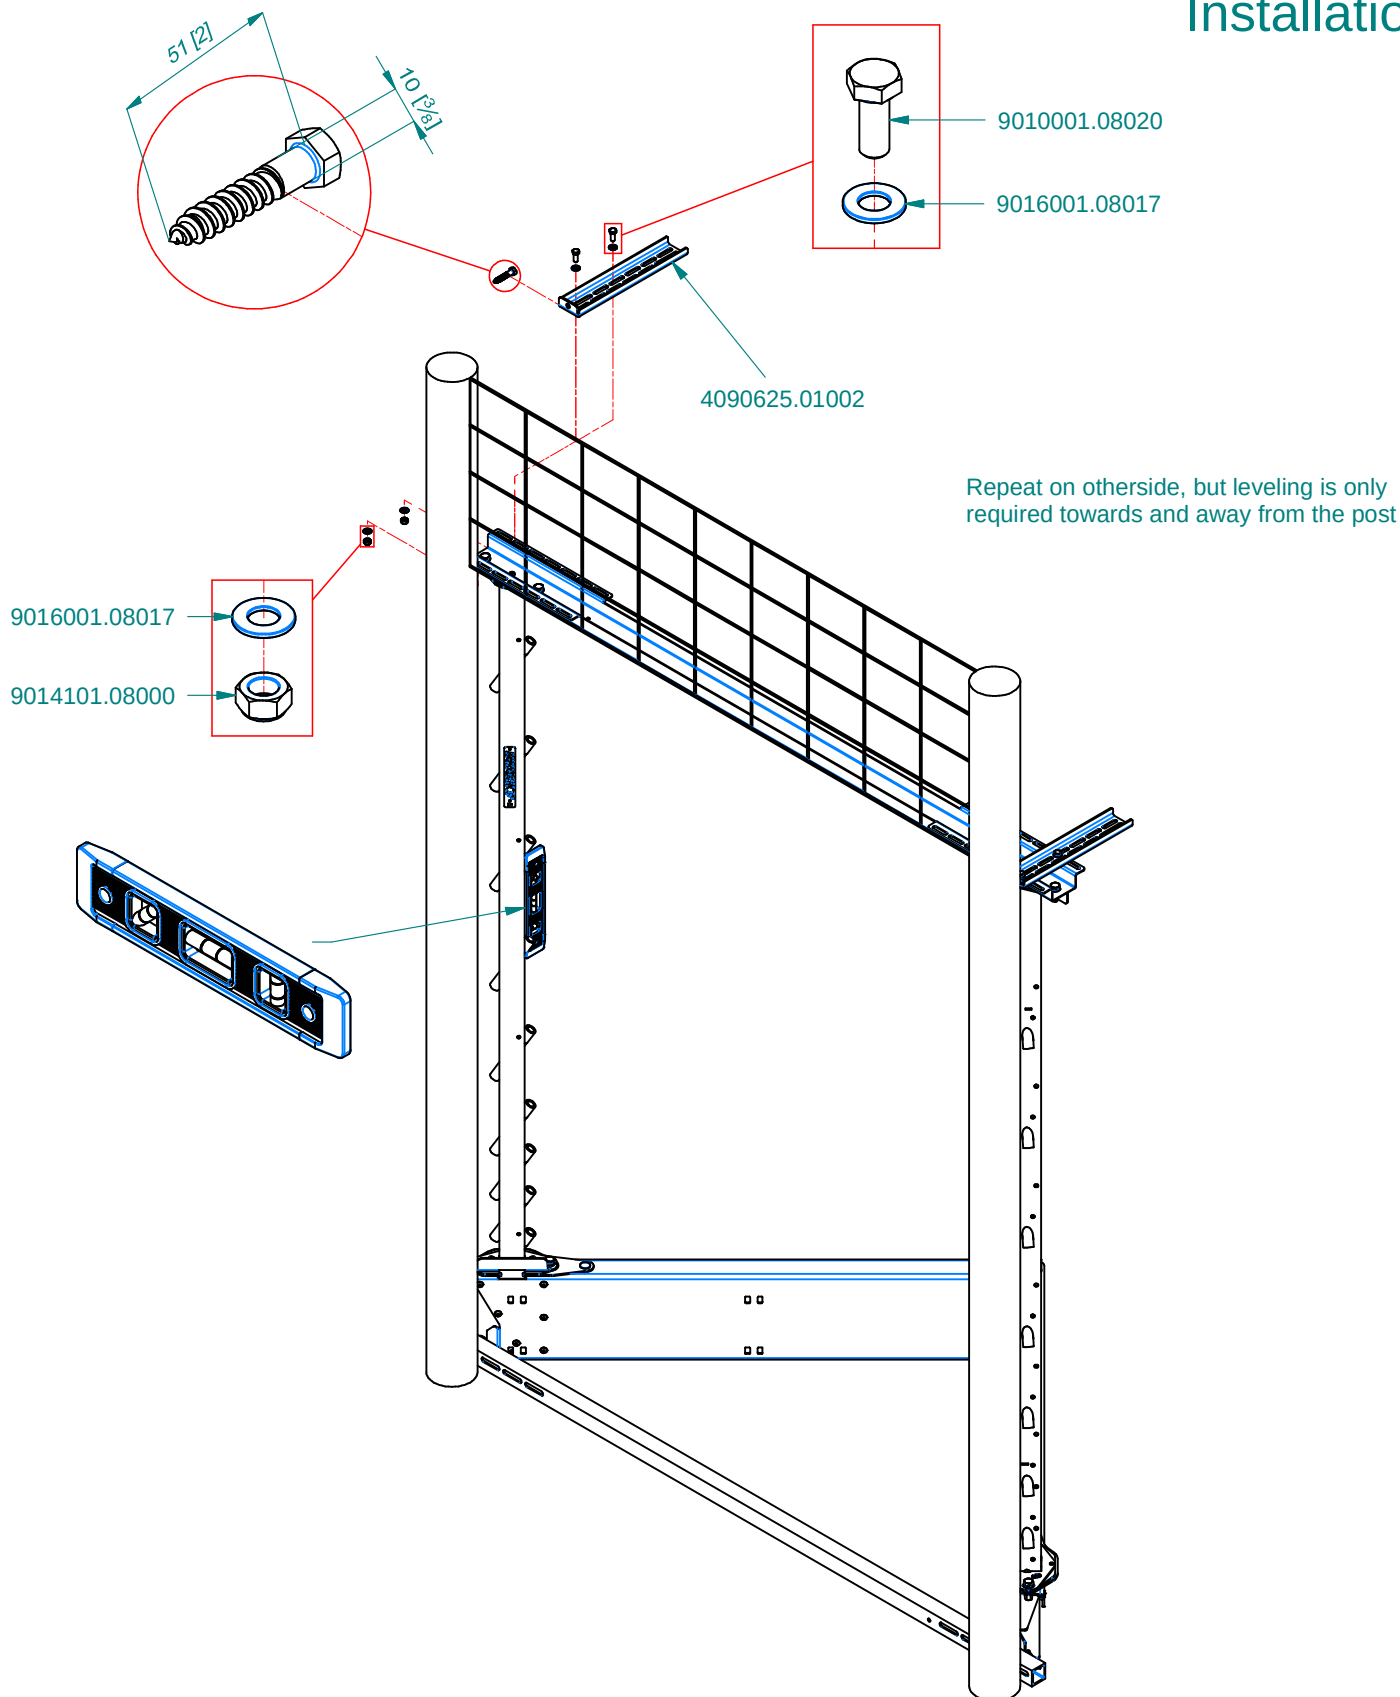

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate


Scale:

5/9/2025


17
18

Installation

If brackets overhang where they could potentially be ran into cut off with hacksaw.

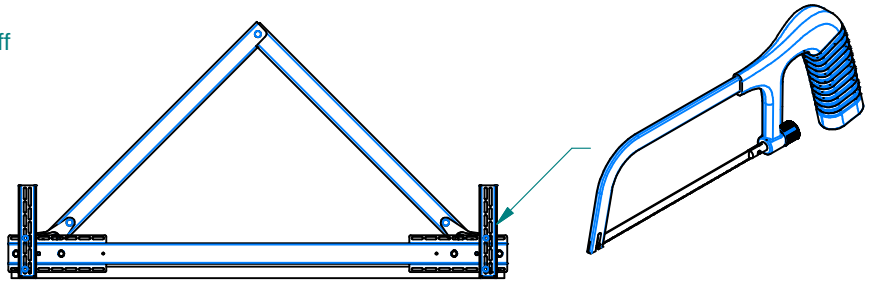

8090625.08001

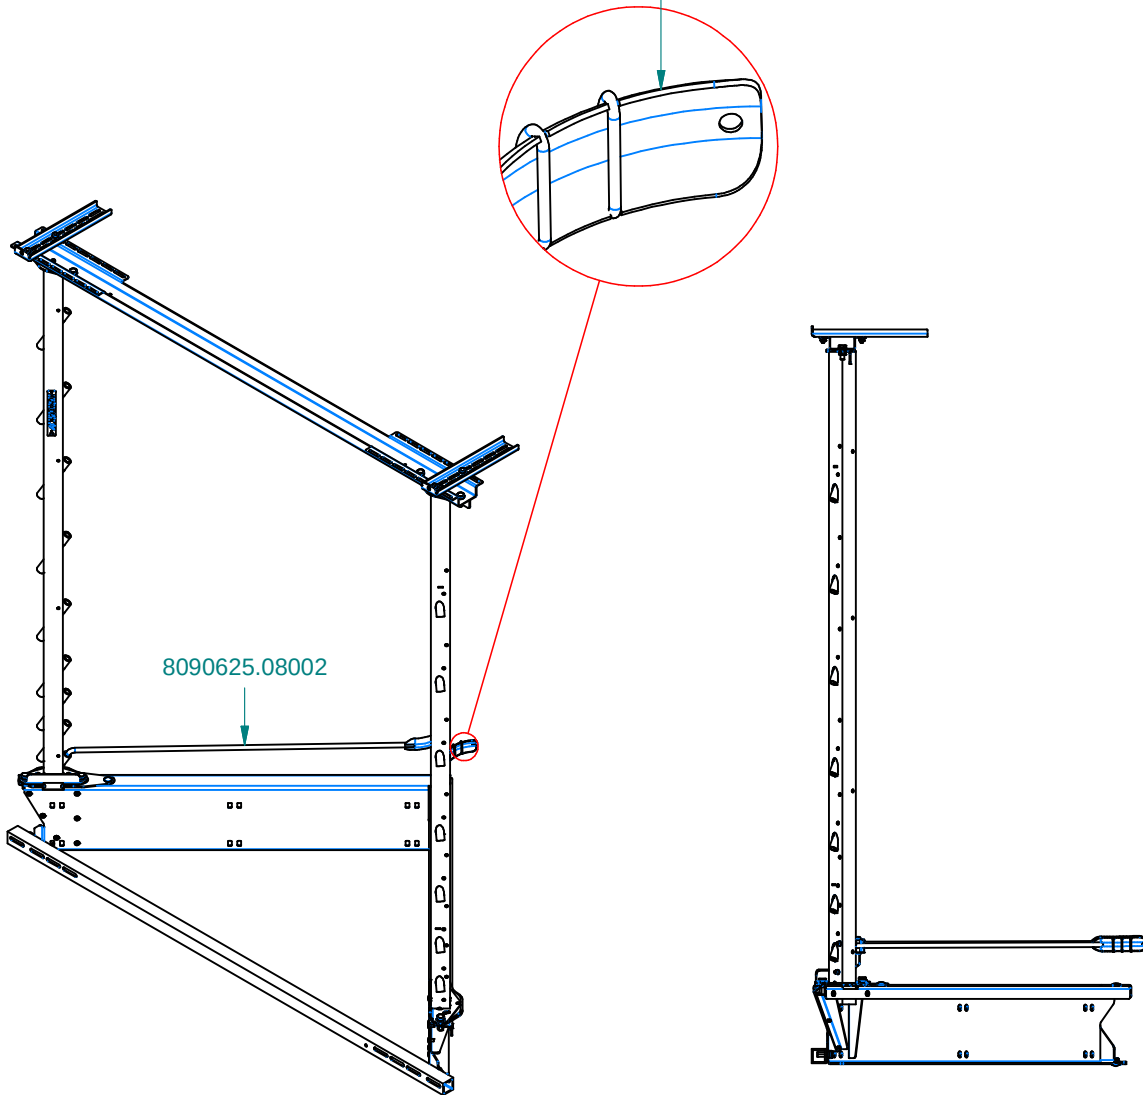

8090625.08002



MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate



Scale:

5/9/2025

13
18

Installation

9014101.06000
9016001.06012

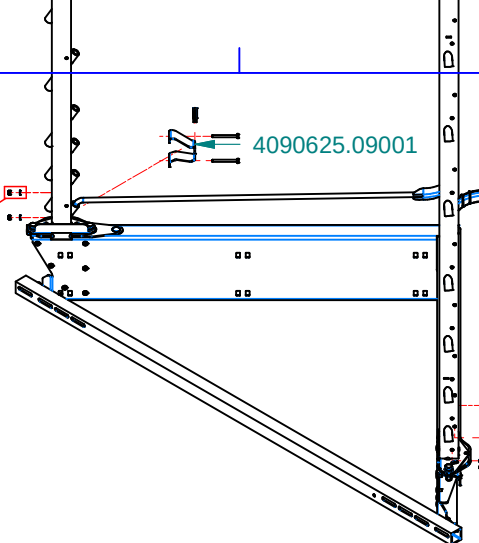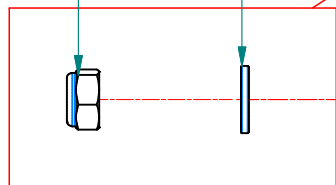


1

9010001.06065

9010001.06065

4090625.09002


4090625.09001M

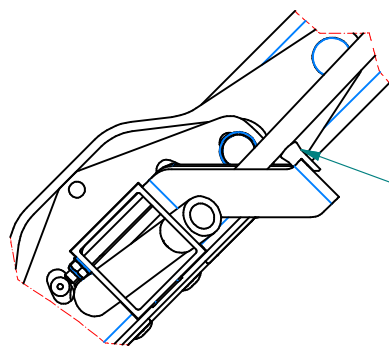

4090625.09002 - To install, hold carefully on the two edges and then slowly pull back the tign until it holds the palstic bumper in place. Then let go of the bumper and pull back on the tign until it is secured into place

Turn both posts wo that there is approximately a 2" gap (can be more or less depending on what you wish to keep out). Once gap is set tighten bolts.

≈ 50mm [2"]

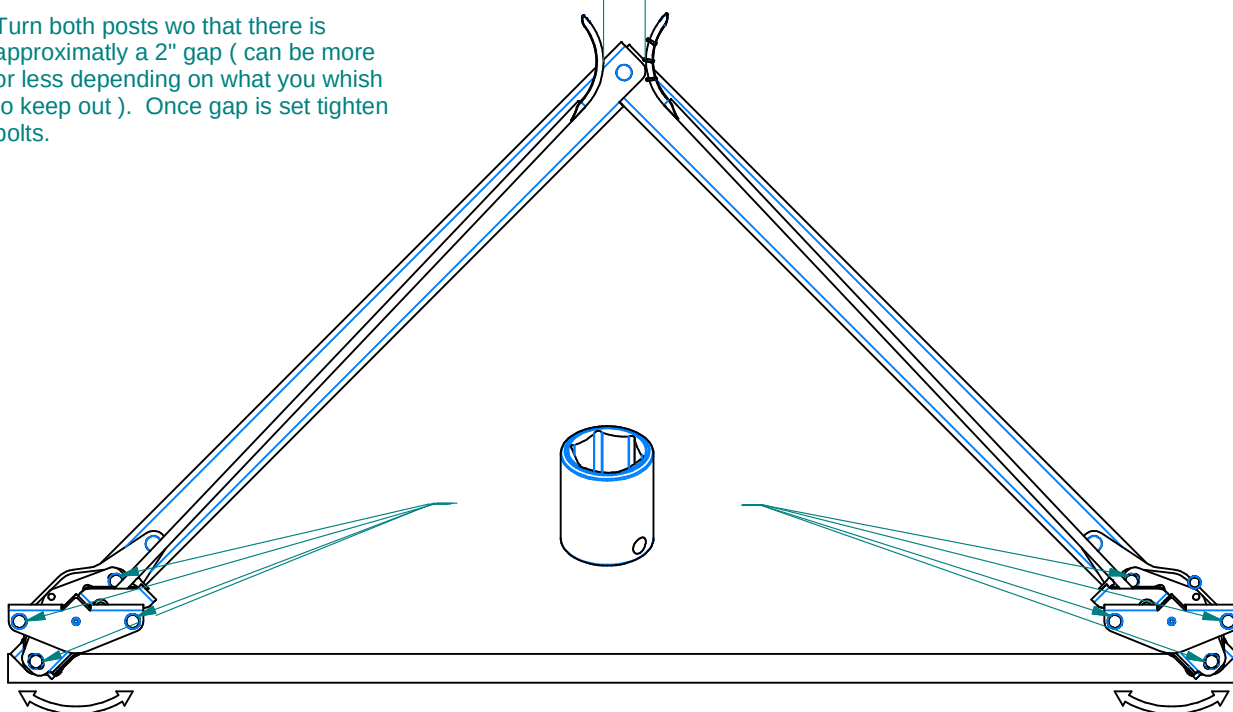

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460


Munckhof Gravity Wildlife Gate

Scale:

5/9/2025

14
18

Installation

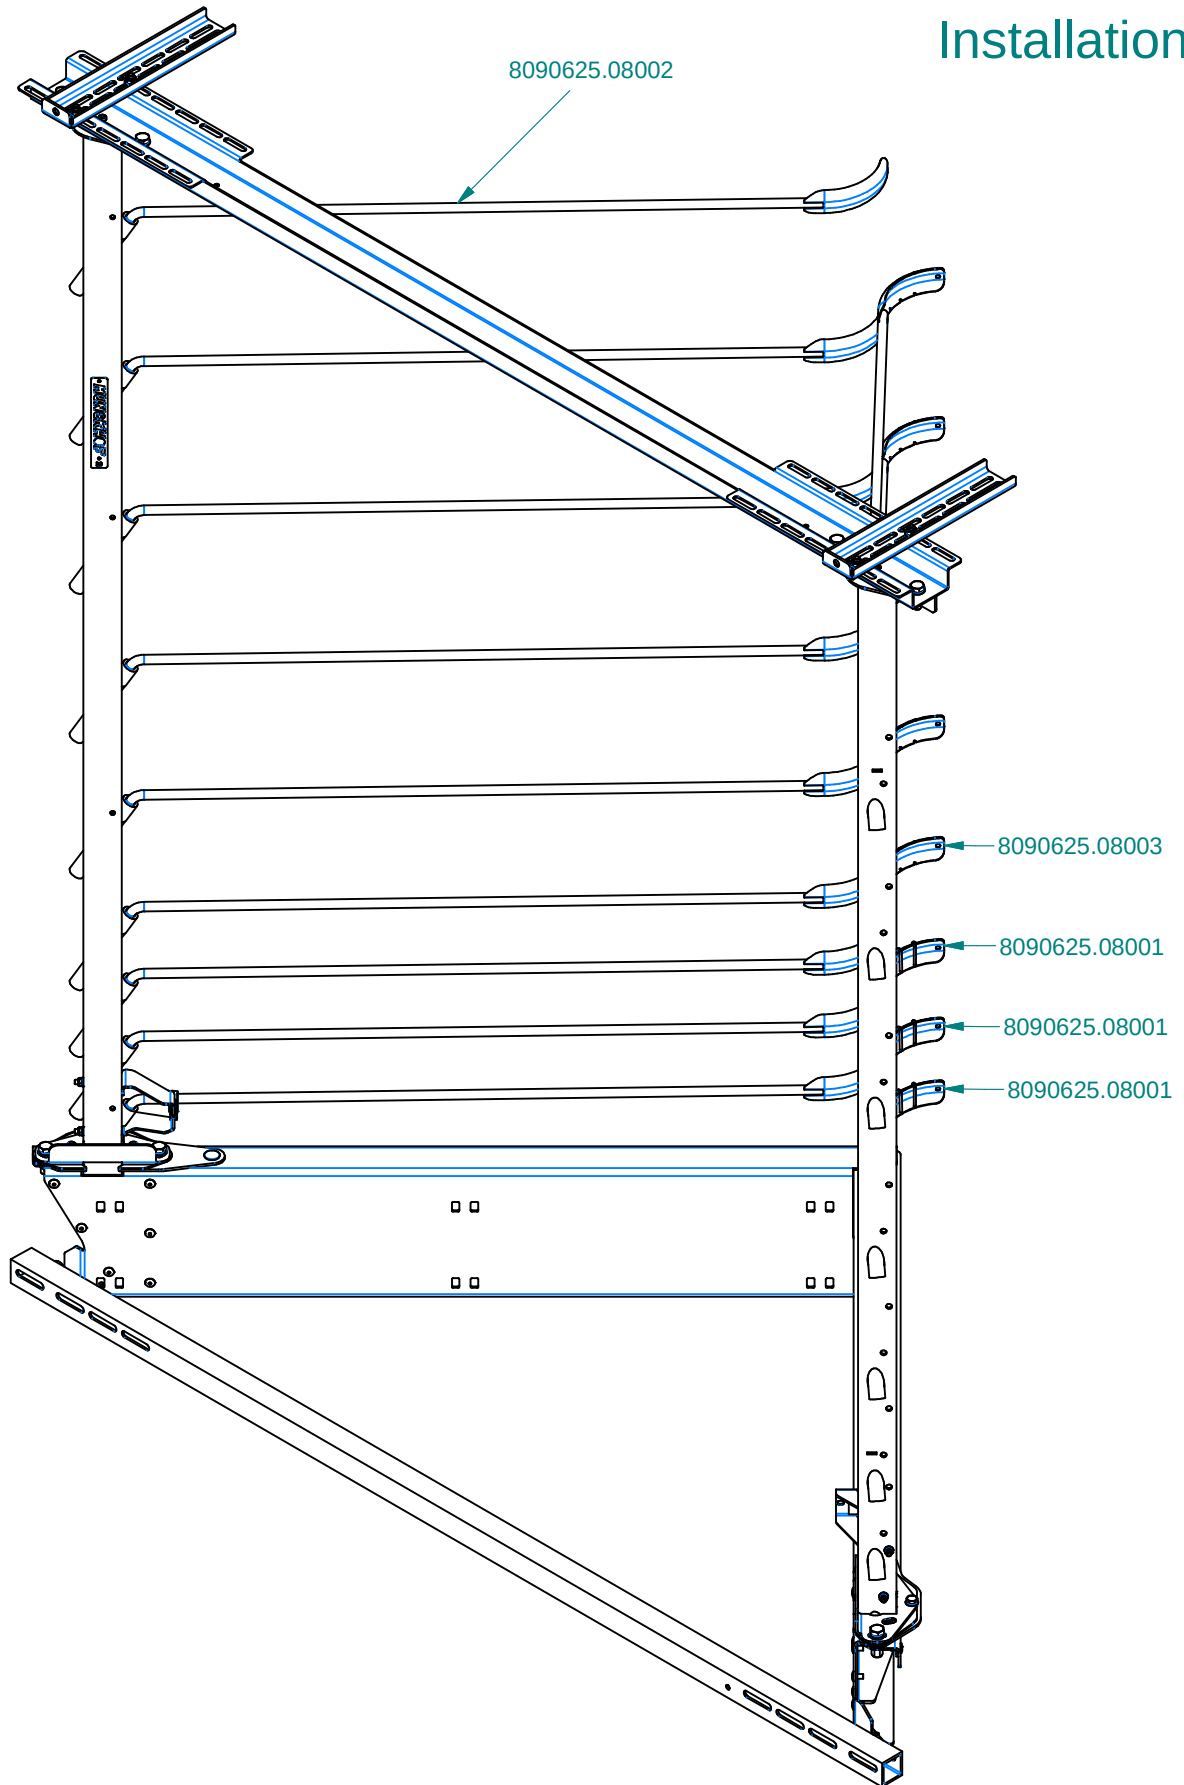

MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate

Scale:

10/29/2024


8090625.01001

15
18

Installation

B

B

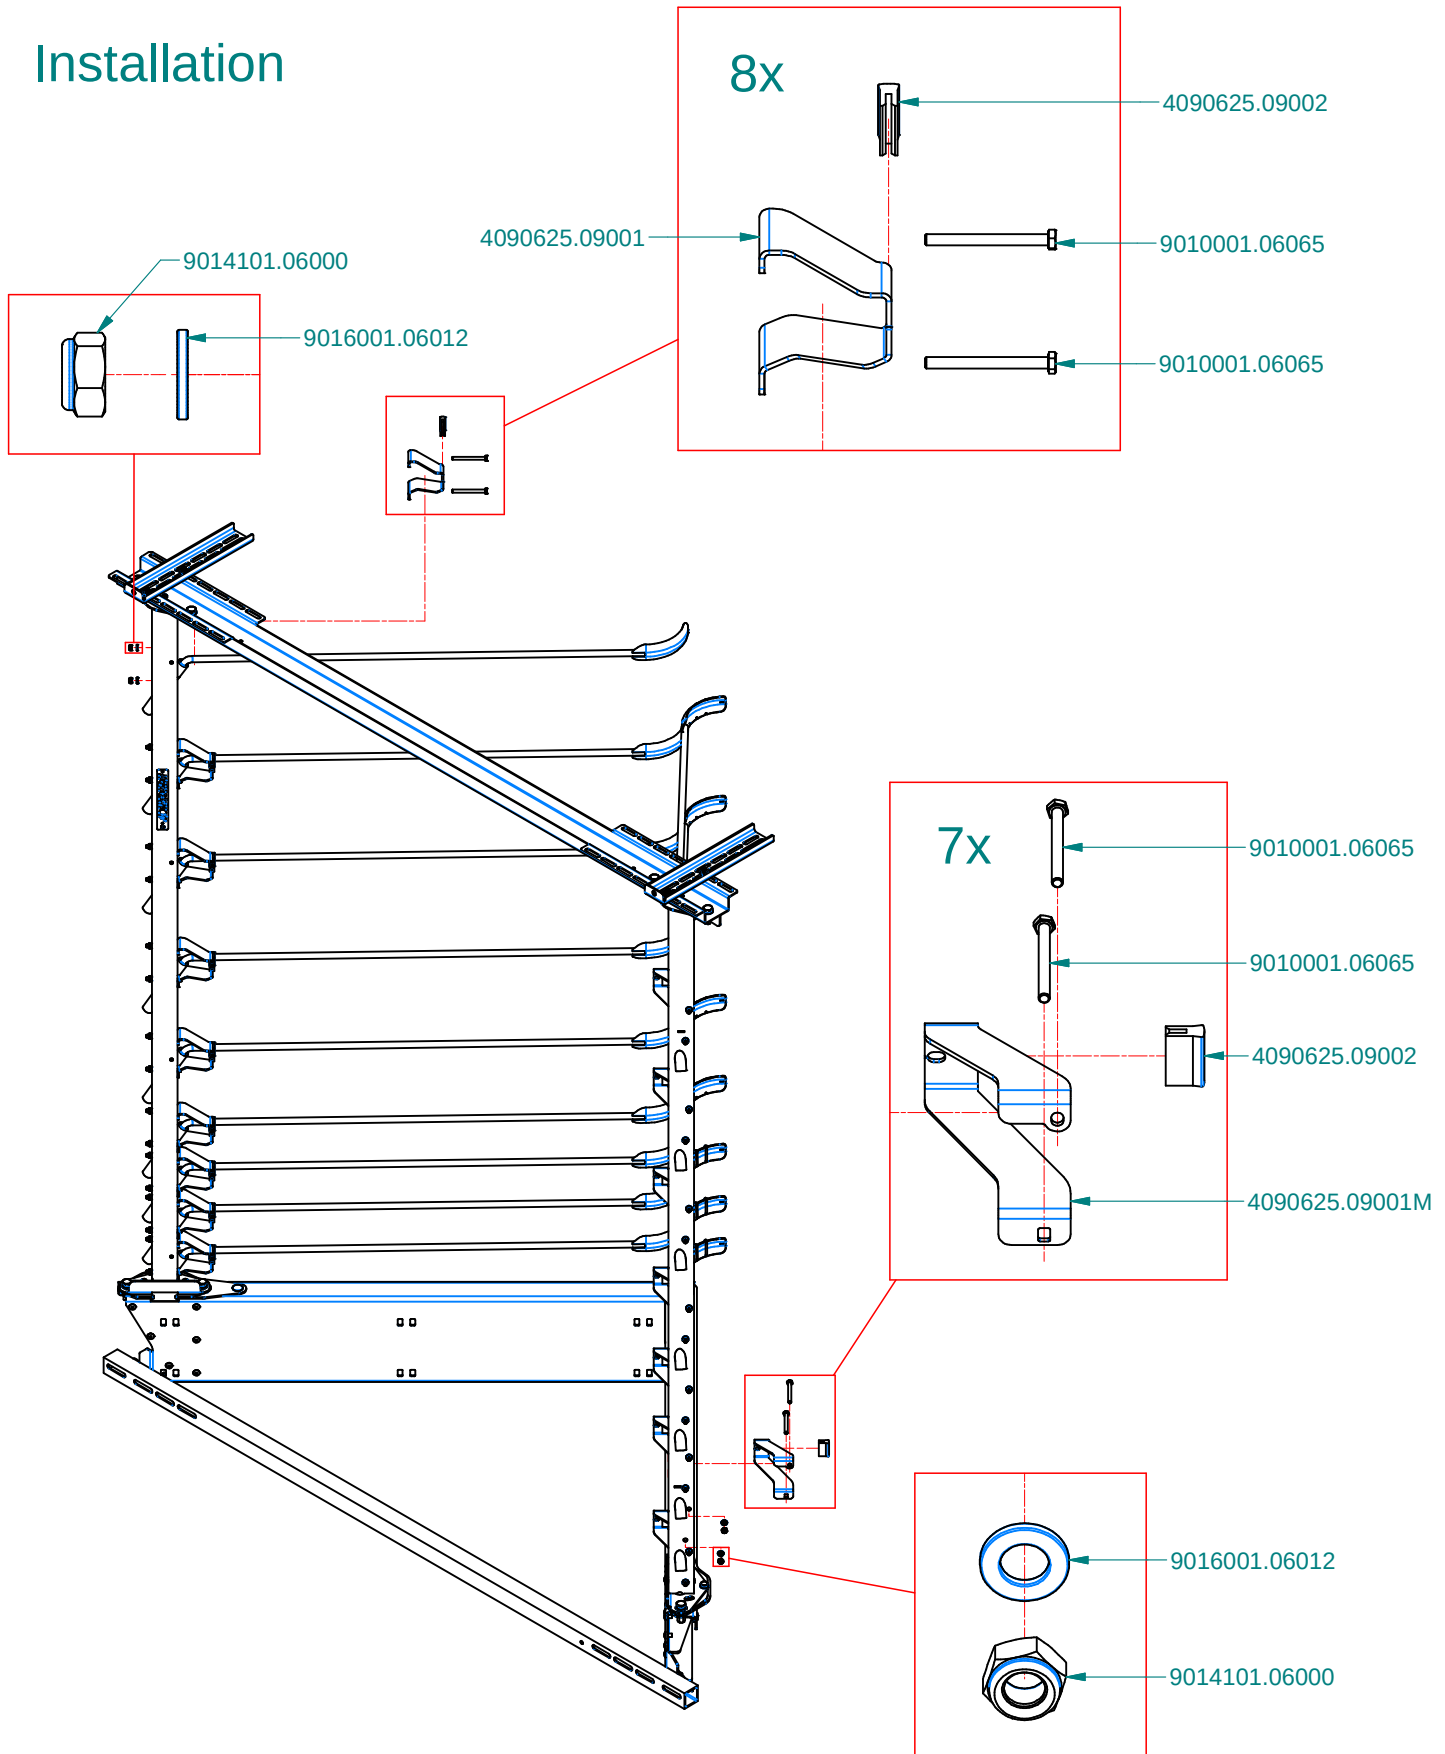

A

A



MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate



Scale:

10/29/2024

8090625.01001

16
18

1

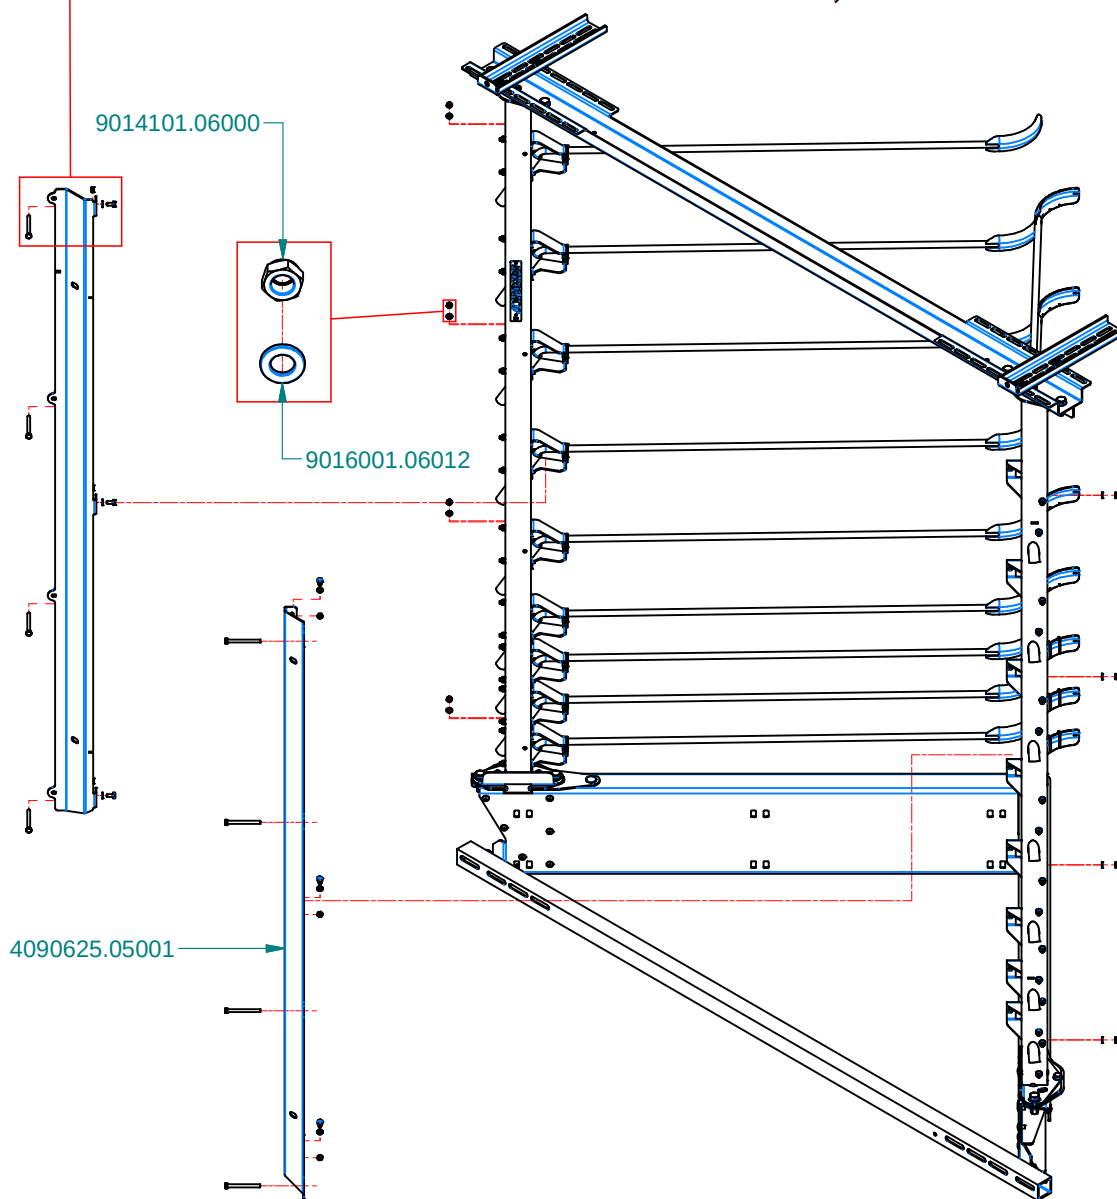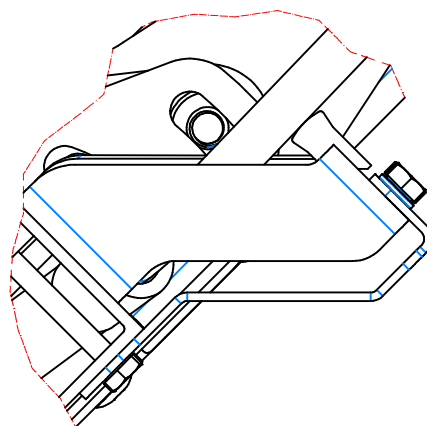

Munckhof Gravity Wildlife Gate

Scale:




10/29/2024

8090625.01001

$$\begin{array}{c} 17 \\ 18 \end{array}$$

Installation

Ø8mm (Ø5/16")

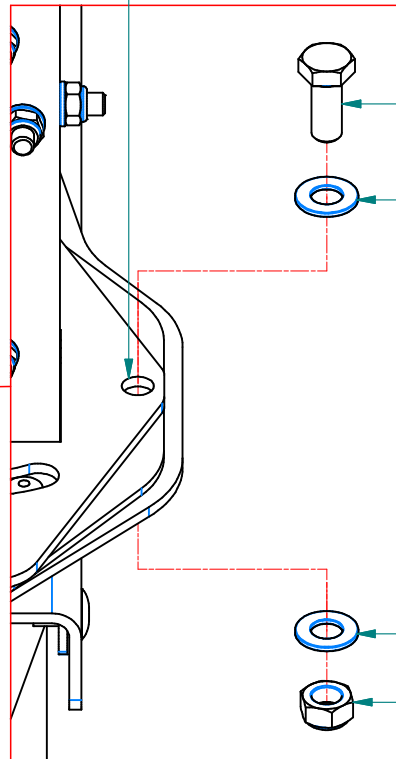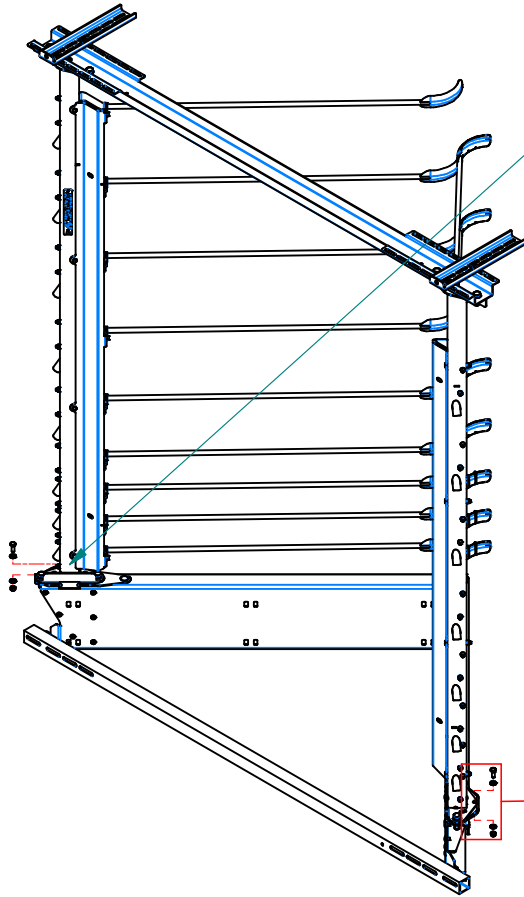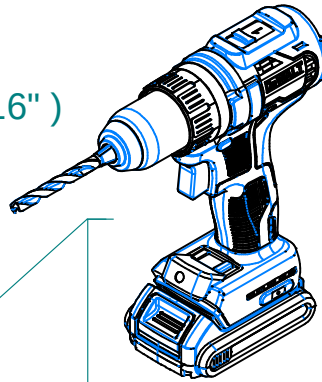

9010001.08020

9016001.08017

9016001.08017

9014101.08000



MUNCKHOF

Phone: (250) 498-4426 Fax: (250) 498-4460

Munckhof Gravity Wildlife Gate

Scale:

10/29/2024

8090625.01001

18
18